



# 24372 Purge and Fresh Water Flow Meter Retrofit

## 1/12/15

1. Remove the brown and white wires from the terminal blocks going to the old flow meter.
2. Take the supplied terminal block marked **31** and mount it next to the two terminal blocks that you just removed wires from.
3. Run a wire from this block to the upper cabinet into an existing **31** terminal block.
4. Remove the old purge flow meter.
5. Install the new flow meter and cable.
6. Wire the cable as shown for your designated model.

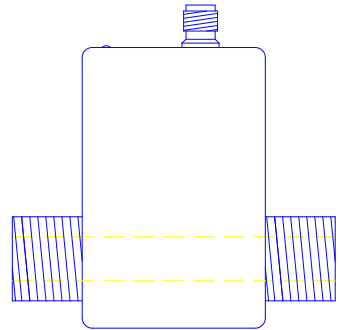

### 4-WIRE PIGTAIL CONNECTOR (BLACK HOOD)

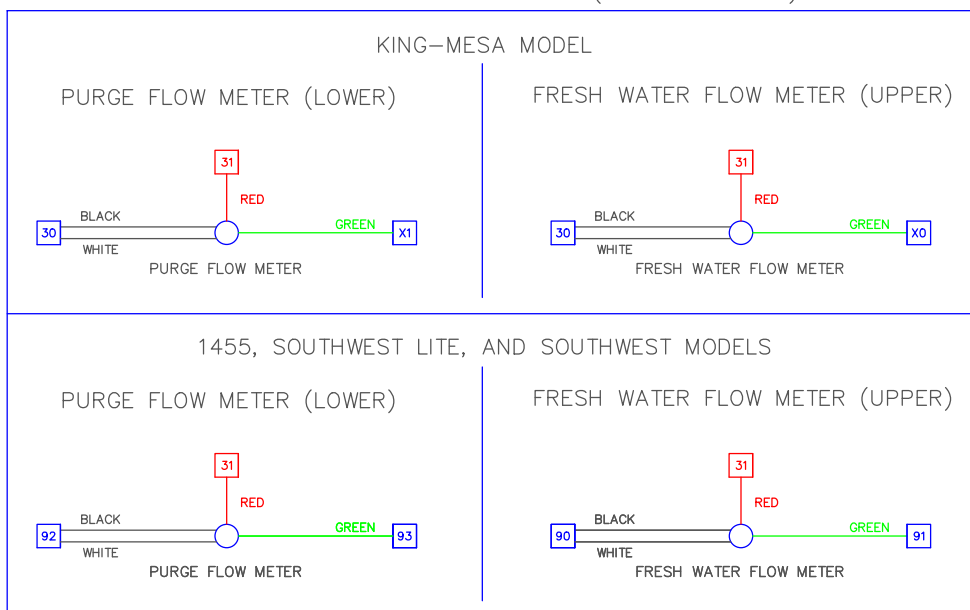

### 5-WIRE PIGTAIL CONNECTOR (GREY HOOD)

